
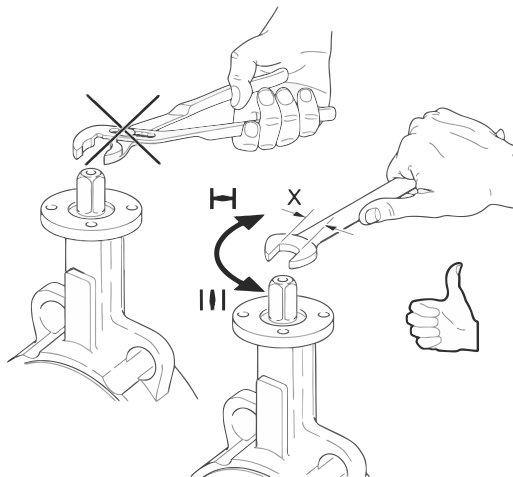



de	Montageanleitung	Schneckengetriebe
en	Mounting instructions	Worm gear
fr	Instructions de montage	Engrenage à vis sans fin
sv	Monteringsinstruktion	Snäckväxel
nl	Montage-handleiding	Wormwielverstelling
it	Istruzioni di montaggio	Ingranaggio a vite senza fine
fi	Asennusohje	Vaihteisto
es	Instrucciones de montaje	Engranaje helicoidal
da	Monteringsvejledning	Snekkedrev
pl	Instrukcja montażu	Przekładnia ślimakowa
cz	Montážní návod	Šnekové kolo
hu	Szerelési útmutató	Kézi mozgó szerelvény
el	Οδηγίες εγκατάστασης	Χειροκίνητος μοχλισμός
ru	Инструкция по установке	Червячная передача
zh	安裝指導	蜗轮式手动开关裝置
tr	Montaj talimatları	Sonsuz dişli

ASK41NF10SP**1**


A6V12649797Z06

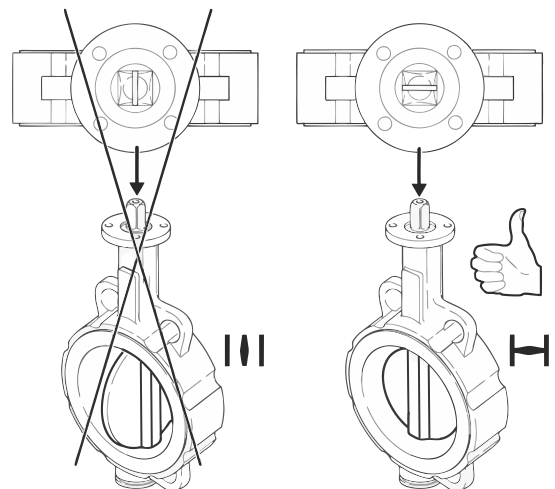

A6V12649797Z05

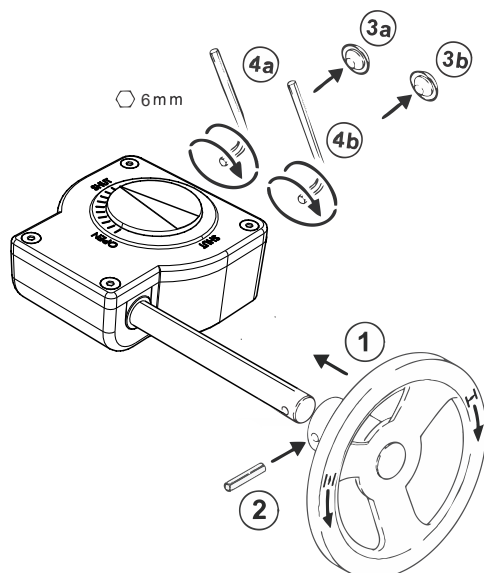
2

A6V12649797Z00

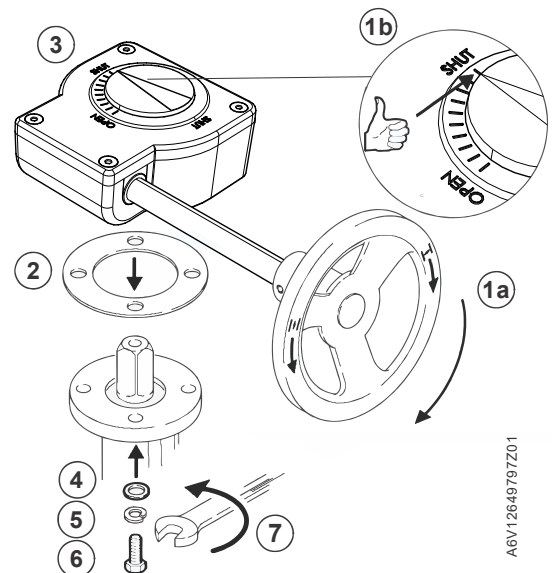3


A6V12649797Z01

4

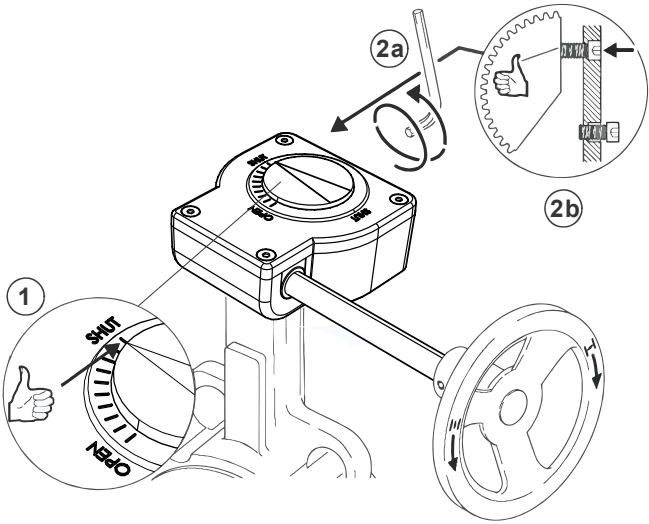


A6V12649797Z02

5

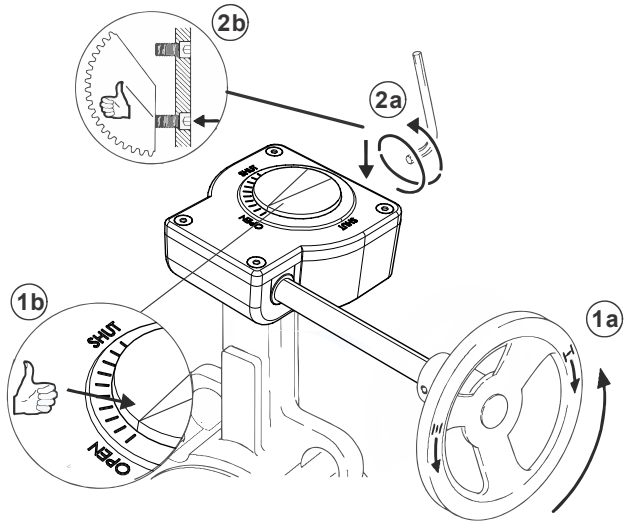


A6V12649797Z03

6

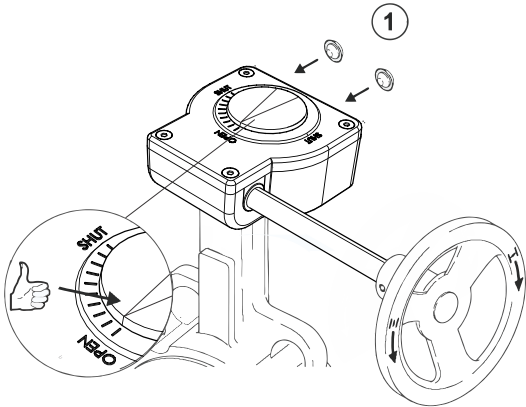

A6V12649797Z04

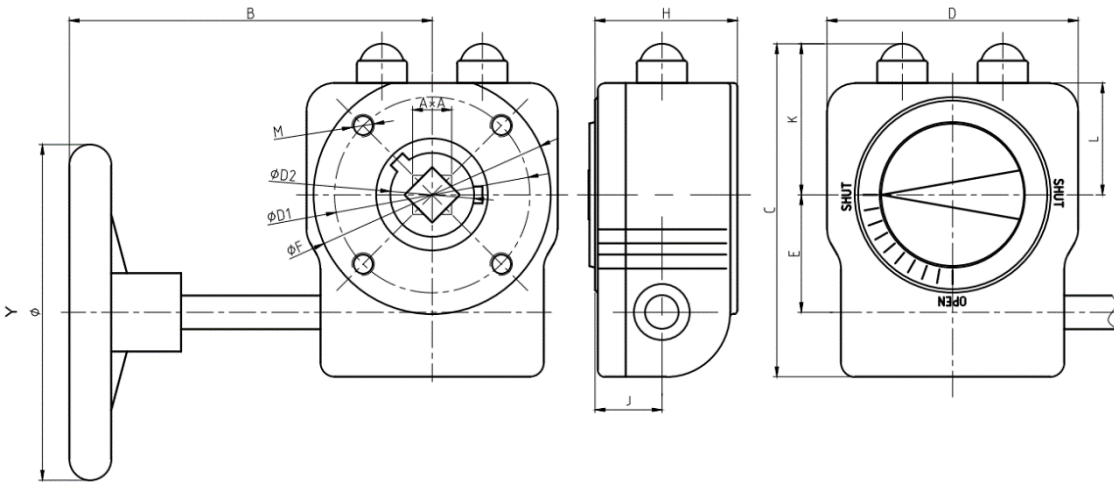

Type	DN	A	B	C	D	E	F	H	Y	D1	M	D2	J	K	L	
		☐							Ø	Ø		Ø				[kg]
ASK41NF10SP	250...400	22	239	150	120	60	117	56	250	102	M10	43	25	65	45	3.16